



ECCO®

Installation and Operation Instructions EW2320 & EW2321 LED WORKLAMPS

ECCO's EW2320 and EW2321 Modular LED Worklamps feature five 10-watt LEDs that produce a high-intensity beam as well as an aluminum heatsink housing and tough polycarbonate lens. These modular worklamps include hardware for connecting multiple units together either horizontally or vertically (E94011 connector required) allowing the creation of a scene lighting system that is customized to the vehicle. Designed to perform in harsh work environments these robust worklamps also offer all the benefits of LED technology including the brightest white light output, a long, maintenance-free service life and extremely low current consumption.



IMPORTANT! Read all instructions before installing and using. Installer: This manual must be delivered to the end user.



WARNING!

Failure to install or use this product according to manufacturer's recommendations may result in property damage, serious bodily/personal injury, and/or death to you and those you are seeking to protect!



Do not install and/or operate this safety product unless you have read and understand the safety information contained in this manual.

1. Proper installation combined with operator training in the installation, use, care and maintenance of vehicle equipment accessories is essential to ensure the safety of you and those you are trying to protect.
2. Exercise caution when working with live electrical connections.
3. This product must be properly grounded. Inadequate grounding and/or shorting of electrical connections can cause high current arcing, which can cause personal injury and/or severe vehicle damage, including fire.
4. Proper placement and installation are vital to the performance of this worklamp. Install this product so that output performance of the system is maximized and the controls are placed within convenient reach of the operator so that s/he can operate the system without losing eye contact with the work area.
5. It is the responsibility of the vehicle operator to ensure during use that all features of this product work correctly. In use, the vehicle operator should ensure the projection of the beam is not blocked by vehicle components (i.e., open trunks or compartment doors), people, vehicles, or other obstructions.
6. The manufacturer assumes no liability for any loss resulting from the use of this device.

NOTE: Black die cast Aluminum housing gets very hot to the touch after operating constantly for several hours.

Specifications:

Voltage:	EW2320:	12-24 VDC
	EW2321:	12-24 VDC
Current:	EW2320:	2.2 Amps @ 12.8VDC
	EW2321:	2.2 Amps @ 12.8VDC
Weight:	EW2320:	1.3 lbs.
	EW2321:	1.3 lbs.
Lumens:	EW2320:	2400(Raw), 2100(Effective)
	EW2321:	2400(Raw), 2100(Effective)

Installation:

Single unit installation:

1. Select a mounting location for the unit on a flat surface. Place the unit bracket, flat side down, on the surface.
2. Use the two slots in the bracket as a template to mark two hole locations in the surface.
3. Drill two 0.257" diameter (F sized drill bit) holes at the locations marked.
4. Use 1/4" or M6 hardware (including bolts, lock washers, & nuts) to secure the unit to the surface.

Multiple units installation – vertical (see figure 1):

1. Placed two units face down on a flat surface. The units should be placed top to bottom. They have been placed correctly if the bottom edge ribs of one unit fit in-between the top edge ribs of the other unit.
 2. Place a 55x13x3.5mm plate over the two center holes (one on each unit) on the left side. Secure the plate to the two units using two M4x10mm screws and M4 lock washers.
 3. Repeat step 2 for the right side of the two units.
 4. Repeat steps 1-3 to add additional units to the array.
- WARNING: Do not connect more than six (6) units together in an array.**
5. Connect two units together electrically using an E94011 Y-connector. In the case of a 3+ unit array, continue connecting units together with E94011 connectors until you are left with a single female receptacle. (You may also need to use extenders to make all connections.) Plug a male receptacle (with black and red wired spades on the other end) in the remaining female receptacle.
 6. Select a mounting location for the array on a flat surface. For multiple unit arrays, plan to use one bracket for every two units connected. Place the unit bracket(s), flat side down, on the surface.
 7. Use the two slots in each bracket as a template to mark two hole locations for each bracket in the surface.
 8. Drill 0.257" diameter (F sized drill bit) holes at the locations marked.
 9. Use 1/4" or M6 hardware (including bolts, lock washers, & nuts) to secure the array to the surface.

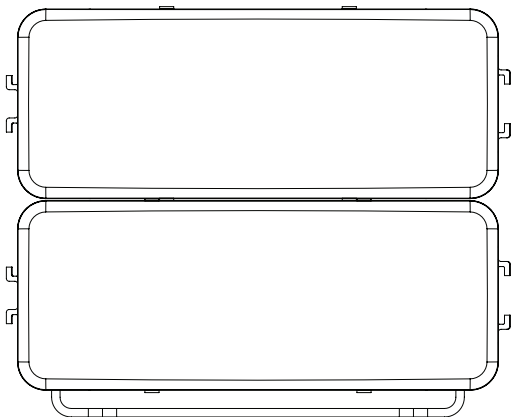


FIG. 1

Multiple units installation – horizontal (see figure 2):

1. Placed two units face down on a flat surface. The units should be placed side to side, with the top edges flush to each other. They have been placed correctly if (when looking at them face down) the left edge ribs of one unit fit in-between the right edge ribs of the other unit.
2. Place a 55x32x3.5mm plate over the four holes (two on each unit) in-between the units. Secure the plate to the two units using four M4x10mm screws and M4 lock washers.
3. Repeat steps 1-2 to add additional units to the array. **WARNING: Do not connect more than six (6) units together in an array.**
4. Connect two units together electrically using an E94011 Y-connector. In the case of a 3+ unit array, continue connecting units together with E94011 connectors until you are left with a single female receptacle. (You may also need to use extenders to make all connections.) Plug a male receptacle (with black and red wired spades on the other end) in the remaining female receptacle.
5. Select a mounting location for the array on a flat surface. For multiple unit arrays, plan to use one bracket for every two units connected. Place the unit bracket(s), flat side down, on the surface.
6. Use the two slots in each bracket as a template to mark two hole locations for each bracket in the surface.
7. Drill 0.257" diameter (F sized drill bit) holes at the locations marked.
8. Use 1/4" or M6 hardware (including bolts, lock washers, & nuts) to secure the array to the surface.


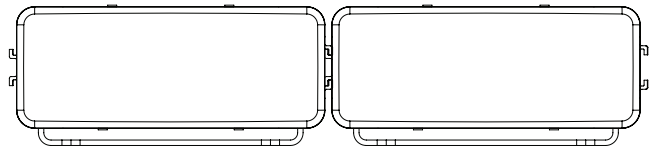


FIG. 1

Wiring Instructions:

Black Wire: Ground
 Red Wire: Connect to fused power

See wiring diagram for further instruction

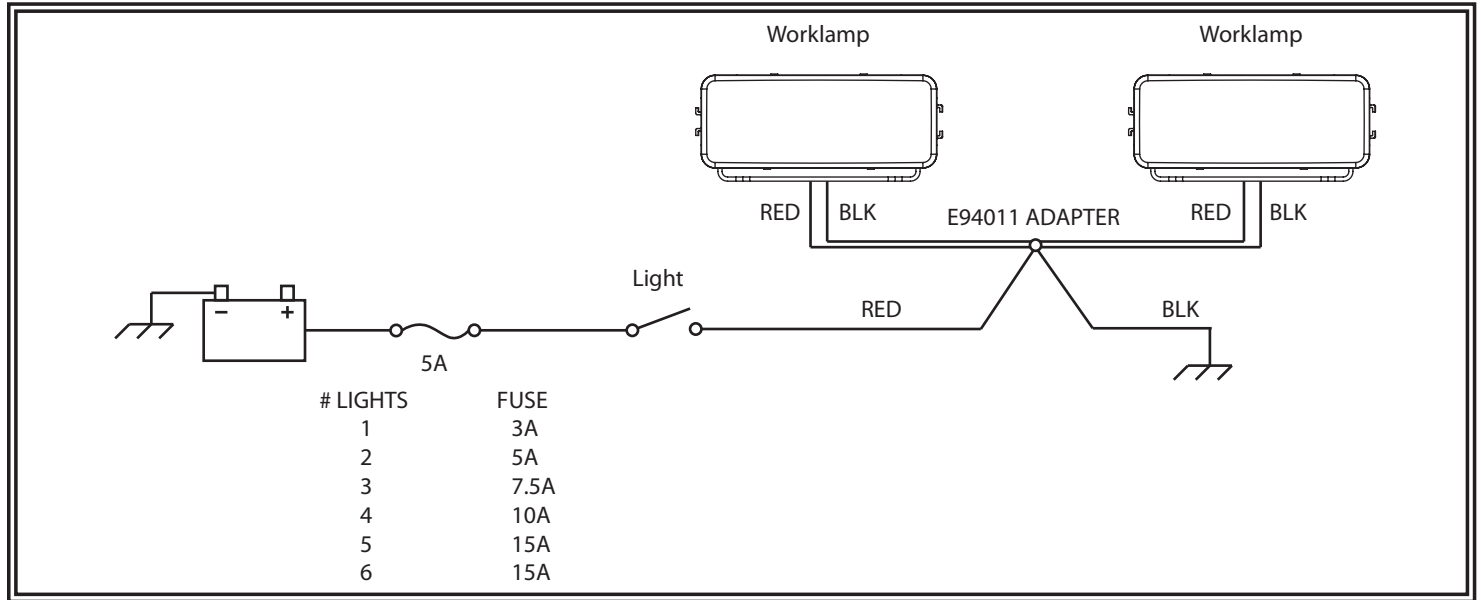

Manufacturer Limited Warranty and Limitation of Liability:

Manufacturer warrants that on the date of purchase this product will conform to Manufacturer's specifications for this product (which are available from the Manufacturer upon request), and Manufacturer further warrants that this product is free from defects in materials and workmanship. This Limited Warranty extends for 36 months from the date of purchase. Other warranties may apply, call Manufacturer for details. Manufacturer will, at its discretion, repair or replace any product found by the Manufacturer to be defective and subject to this Limited Warranty.

DAMAGE TO PARTS OR PRODUCTS RESULTING FROM TAMPERING, ACCIDENT, ABUSE, MISUSE, NEGLIGENCE, UNAPPROVED MODIFICATIONS, FIRE OR OTHER HAZARD; IMPROPER INSTALLATION OR OPERATION; OR NOT BEING MAINTAINED IN ACCORDANCE WITH THE MAINTENANCE PROCEDURES SET FORTH IN MANUFACTURER'S INSTALLATION AND OPERATING INSTRUCTIONS VOIDS THIS LIMITED WARRANTY.

ORAL STATEMENTS OR REPRESENTATIONS ABOUT THE PRODUCT WHICH MAY HAVE BEEN MADE BY SALESPEOPLE, DEALERS, AGENTS OR OTHER MANUFACTURER'S REPRESENTATIVES DO NOT CONSTITUTE WARRANTIES. THIS LIMITED WARRANTY MAY NOT BE AMENDED, MODIFIED, OR ENLARGED EXCEPT BY A WRITTEN AGREEMENT SIGNED BY AN AUTHORIZED OFFICIAL OF MANUFACTURER WHICH EXPRESSLY REFERS TO THIS LIMITED WARRANTY.

Exclusion of Other Warranties: MANUFACTURER MAKES NO OTHER WARRANTIES, EXPRESS OR IMPLIED. THE IMPLIED WARRANTIES FOR MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY EXCLUDED AND SHALL NOT APPLY TO THE PRODUCT. BUYER'S SOLE AND EXCLUSIVE REMEDY IN CONTRACT, TORT, OR UNDER ANY OTHER THEORY AGAINST MANUFACTURER REGARDING THE PRODUCT AND ITS USE SHALL BE THE REPLACEMENT OR REPAIR OF THE PRODUCT AS DESCRIBED ABOVE.

Limitation of Liability: IN THE EVENT OF LIABILITY FOR DAMAGES ARISING OUT OF THIS LIMITED WARRANTY OR ANY OTHER CLAIM RELATED TO THE MANUFACTURER'S PRODUCTS, MANUFACTURER'S LIABILITY FOR DAMAGES SHALL BE LIMITED TO THE AMOUNT PAID FOR THE PRODUCT AT THE TIME OF THE ORIGINAL PURCHASE. IN NO EVENT SHALL MANUFACTURER BE LIABLE FOR LOST PROFITS, THE COST OF SUBSTITUTE EQUIPMENT OR LABOR, PROPERTY DAMAGE, OR OTHER SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES BASED UPON ANY CLAIM FOR BREACH OF CONTRACT, IMPROPER INSTALLATION, NEGLIGENCE, OR OTHER CLAIM, EVEN IF MANUFACTURER OR A MANUFACTURER'S REPRESENTATIVE HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. MANUFACTURER SHALL HAVE NO FURTHER OBLIGATION OR LIABILITY WITH RESPECT TO THE PRODUCT OR ITS SALE, OPERATION AND USE, AND MANUFACTURER NEITHER ASSUMES NOR AUTHORIZES THE ASSUMPTION OF ANY OTHER OBLIGATION OR LIABILITY IN CONNECTION WITH SUCH PRODUCT.

This Limited Warranty defines specific legal rights. You may have other legal rights which vary from state to state. Some states do not allow the exclusion or limitation



833 West Diamond St
 Boise, Idaho 83705
Customer Service
 USA 800-635-5900
 UK +44 (0)113 237 5340
 AUS +61 (0)3 63322444
www.eccogroup.com